


NOTE: BLOCK UP FRONT OF TRAILING EDGE 1/32" BEFORE CEMENTING RIBS IN PLACE

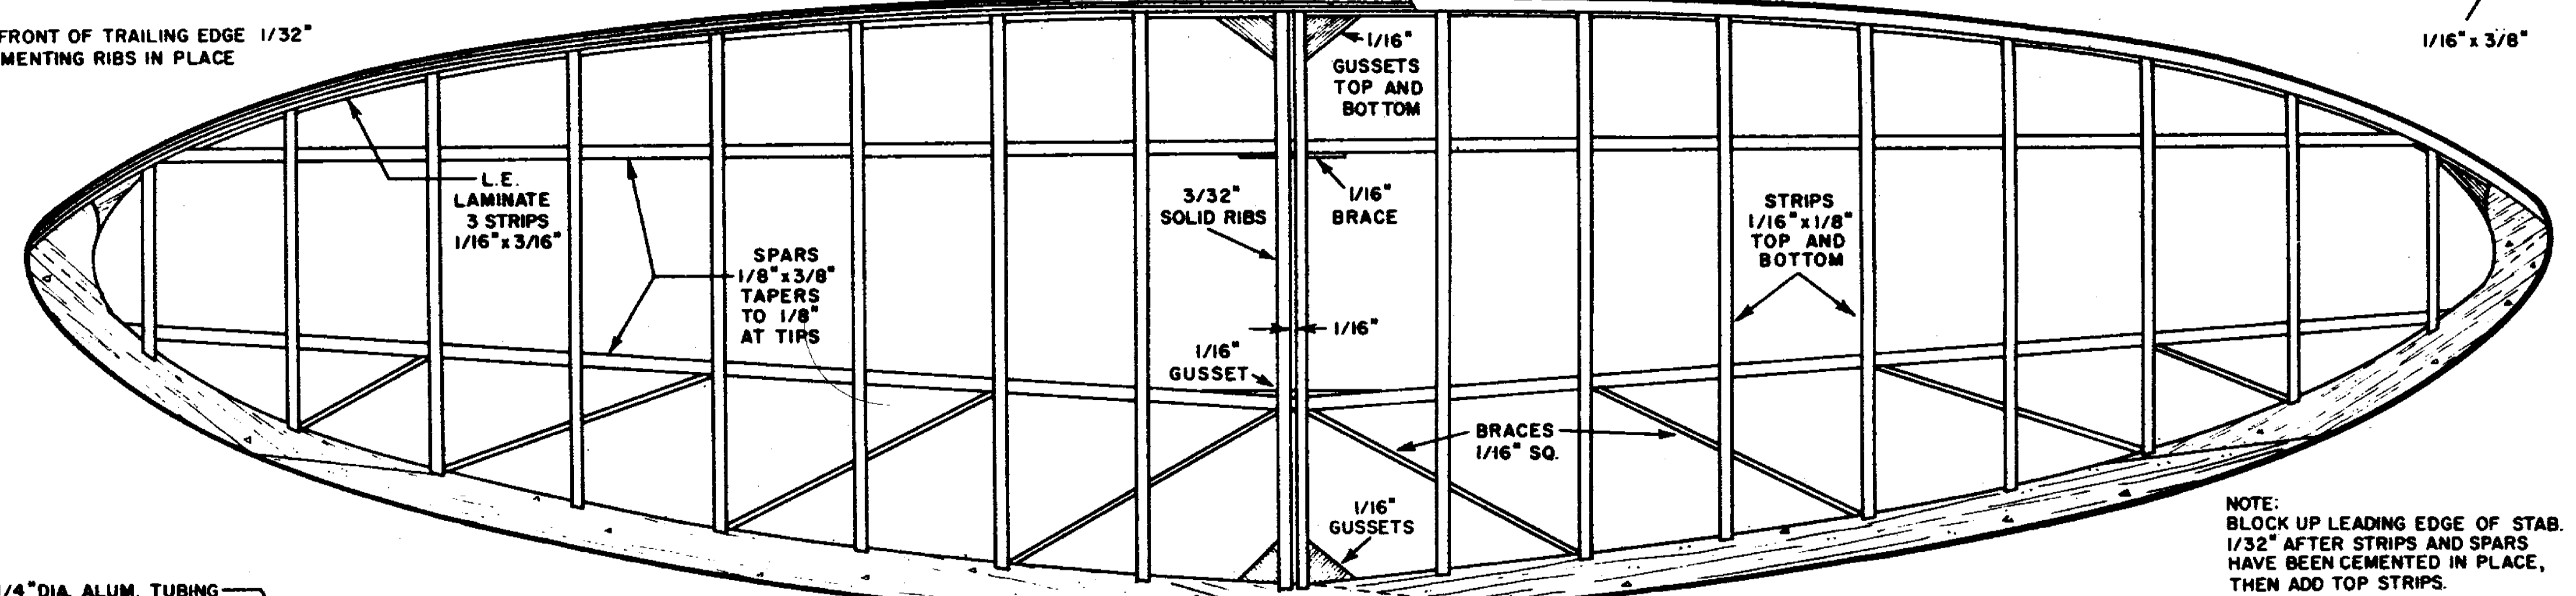

NOTE: BLOCK UP LEADING EDGE OF STAB 1/32" AFTER STRIPS AND SPARS HAVE BEEN CEMENTED IN PLACE, THEN ADD TOP STRIPS.

